




















# DigiTrak Quick Reference

# GPS MODE

When AP is ...	Display Shows...	To ...	... Perform the action
Initially Powered-On	Flashing - - -	Allow Gyro to Center	<b>IMPORTANT!</b> Hold Aircraft <u>Still</u> for approximately 10 seconds as long as display is flashing
Disengaged	OFF	Engage Autopilot	Click  to capture and hold present heading - OR - Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode goes into effect ( see ① below).
		Manually Center Gyro	With aircraft heading held <u>completely still</u> , press and hold both  and  simultaneously. ( Display will show -   -   - while centering. ) Hold for about ten seconds, then release both buttons.
Engaged, holding a selected Ground Track	Selected Ground Track	Disengage Autopilot	Click  - OR - Click Control Stick Button
		Modify selected Ground Track in 1 degree increments	Click  or  once per degree
		Hand-fly aircraft to a different direction	Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode is in effect ( see ① below).
		Enter a constant-rate turn	Hold  or  for at least 1 sec, then release. Constant-turn mode is in effect ( see ② below).
① Disengaged, in Control Stick Mode	Electronic DG	Capture a new selected Ground Track	While holding Control Stick Button, hand-fly to desired Ground Track. Level the wings, then release Control Stick Button
② Engaged, in Constant-turn Mode	Electronic DG	Stop the turn and capture a new Ground Track to be held	Click  or 

# DigiTrak Quick Reference

# MAGNETIC BACKUP MODE

When AP is ...	Display Shows...	To ...	... Perform the action
Initially Powered-On	Flashing - - -	Allow Gyro to Center	<b>IMPORTANT!</b> Hold Aircraft Still for approximately 10 seconds as long as display is flashing
Disengaged	- - -	Engage Autopilot	Click  to capture and hold present heading - <b>OR</b> - Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode goes into effect ( see ① below).
		Manually Center Gyro	With aircraft heading held <u>completely still</u> , press and hold both  and  simultaneously. ( Display will show -   - while centering. ) Hold for about ten seconds, then release both buttons.
Engaged, holding a Magnetic Heading	-   -   -	Disengage Autopilot	Click  - OR - Click Control Stick Button
		Modify magnetic heading in 1-degree (approx.) increments	Click  or  once per degree
		Hand-fly aircraft to a different direction	Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode is in effect ( see ① below).
		Enter a constant-rate turn	Hold  or  for at least 1 sec, then release. Constant-turn mode is in effect ( see ② below).
① Disengaged, in Control Stick Mode	- - -	Capture a new selected Heading	While holding Control Stick Button, hand-fly to desired heading. Level the wings, then release Control Stick Button
② Engaged, in Constant-turn Mode	Moving -   - to left or right	Stop the turn and capture a new Magnetic Heading to be held	Click  or 